

wellcare



AIRBAG FOOT MASSAGER

USER MANUAL

Model Number FE-5311



Contents

03	Important Safety Instructions
07	Product Overview
08	Operation
09	Troubleshooting
10	Specifications

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner of the product.

Always follow basic safety precautions and accident prevention measures, including the following:

Usage conditions and restrictions

- This product is intended for private use by adults only. It is not suitable for commercial or trade use. Do not use it for anything other than its intended purpose, and only use it as described in this manual.
- **ALWAYS** unplug this appliance from the electrical outlet immediately after using and before cleaning.
- **DO NOT** reach for product that has fallen into water. Unplug immediately.
- **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
- **DO NOT** place in or drop into water or other liquid.

Important Safety Instructions (Cont.)

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts.
- Close supervisions is necessary when this appliance is used by on, or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use any attachments not provided with the product.
- **NEVER** operate the appliance if it has a damaged cord or plug, if it is not working properly, been dropped or damaged, or dropped into water, contact our After Sales Support.
- **NEVER** drop or insert any object into any opening.
- **NEVER** operate the appliance with the air opening blocked. Keep the air openings free of lint and hair.
- **DO NOT** operate where aerosol (spray) products are being used or where oxygen is being administered.
- **DO NOT** operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- **DO NOT** carry this appliance by supply cord or use the cord as a handle.
- **DO NOT** use outdoors.
- **DO NOT** stand on or in appliance. Use only when seated.
- **DO NOT** handle the plug with wet hands
- This product should never be used by any individual suffering from any physical alignment that would limit the capacity to operate the controls, or who have sensory deficiencies.
- This appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- For indoor use only.


Important Safety Instructions (Cont.)

Health matters


- This product is not intended for medical use.
- Consult your doctor prior to using this product if:
 1. You are pregnant
 2. You have a pacemaker
 3. You have concerns regarding your health
- **NOT** recommended for use by diabetics.
- **NEVER** use the device on any open wounds, discoloured areas, or any area of the body that is swollen, burned or inflamed.
- **NEVER** use the product after surgery or if you are not yet fully recovered.
- If you experience pain in a muscle or joint for an extended period of time, discontinue use and consult your physician.

- **Do not** use the product in a high-temperature environment or where it may become wet or damp. If the unit becomes wet, do not use.
- **Do not** use this product if you are currently pregnant or menstruating.
- **Do not** place the unit in a place where it may be in contact with flammable items, explosive items, or chemicals.
- **Do not** use this product if, you have any medical complication such as osteoporosis, a skin injury or disorder, low blood pressure, cancer or a pacemaker or other medical implant. Contact your physician before using this product.
- Stop using the product immediately if you feel uncomfortable or any abnormalities occur.

Product Overview

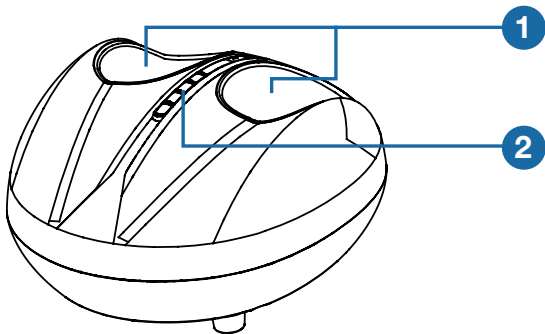

Control Panel

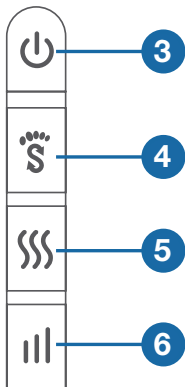

- 1 Foot sleeves
- 2 Control panel
- 3 **Power** button: press to turn the device on. Press again to turn the device off.
- 4 **Mode** button: on standby mode, press once to start smart mode (air compression + feet roller + heating function). Press repeatedly to choose between different modes (3 built-in modes).
- 5 **Heat** button: on standby mode, press to turn on the heating function. Green light indicates low heat, Red light indicates high heat, no light indicates heating function is off.
- 6 **Intensity** button: press repeatedly to choose between the intensity modes. Green light indicates low intensity, blue light indicates medium intensity, red light indicates high intensity.

Operation

Charging the device

- Connect the supplied AC adaptor to the power port on the device and the other end to a power outlet.

Power on and using the device

Once connected to a power outlet, the Power button on the control panel will start flashing and go into standby mode. When flashing, press the power button again to turn the device on (flashing will stop and light up). Press the Mode button to start smart mode (air compression + feet roller). Press repeatedly to choose between different modes (3 built-in modes):

- Default: Smart mode (air compression + feet roller)
- 2nd mode: Air compression
- 3rd mode: Feet roller mode

When the device is on, press the Heat button repeatedly to switch between the different heat settings. The Heat button will light up corresponding to the current heating function setting:

- Green light: low heat
- Red light: high heat
- No light: heating function off

Press the Intensity button to adjust intensity levels, with the device having 3 built-in intensity settings. The Intensity button will light up corresponding to the current intensity setting:

- Green light: low intensity
- Blue light: medium intensity
- Red light: high intensity.

Troubleshooting

Do not attempt to open and repair the product yourself.

Problem	Solution
Device is not working	Ensure the device is connected to a power source. Press and hold the Power button on the control panel. The Power button will stop flashing and light up.
Device stopped working during massage	The device will automatically shut off after 15 minutes. Restart the device and resume use.

Specifications

AC Adaptor input	100-240V AC 50/60Hz 0.8A
AC Adaptor output	24VDC, 1.5A
Power consumption	36W
Weight	3.5 kg (approx.)
Dimensions (W x H x D) (mm)	360 x 215 x 405 mm

For Technical and Warranty Support

1300 886 649

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,
PO Box 132, Frenchs Forest NSW 1640

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.2.32 for electrical safety.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Notes



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 132 Frenchs Forest, Australia NSW 1640

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: tempo.org/support